 


 
 




 
 


 

 





 


 





 





 
 


 








 





	Original	Replacement		Original	Replacement
	Power		Power		Sleep
	Mute		Mute		Jump
	Source		AV		FAV.CH
	I/II/Audio		Dual		Ok
	1		1		Up
	2		2		Down
	3		3		Left
	4		4		Right
	5		5		Vol+
	6		6		Vol-
	7		7		PR-
	8		8		PR+
	9		9		Red/D.Setup
	0		0		Green/Repeat
	Menu		Menu		Yellow/Zoom
	Info		Info		Blue/Goto
	Exit		Exit		[≡+]/DTV/Radio



