




Original	Replacement	Original	Replacement
	Power		Power
	Portal/Energy Saving		Sleep / Timer
	[]/Ratio		Picture / Format
	Input		AV / Input / RDS
	TV		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.View		D.Menu / Top
	Vol+		Vol+
	Fav		Fav / Marker / PC
	PR+/Page Up		CH+ / Page+
	Vol-		Vol-
	3D		Zoom / Size
	PR-/Page Down		CH- / Page-
	Mute		Mute / Dimmer
	Settings		Setup / OPT /
	Info/Home		Info / Angle
	Q.Menu/3D		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Guide		Guide / EPG / -/-

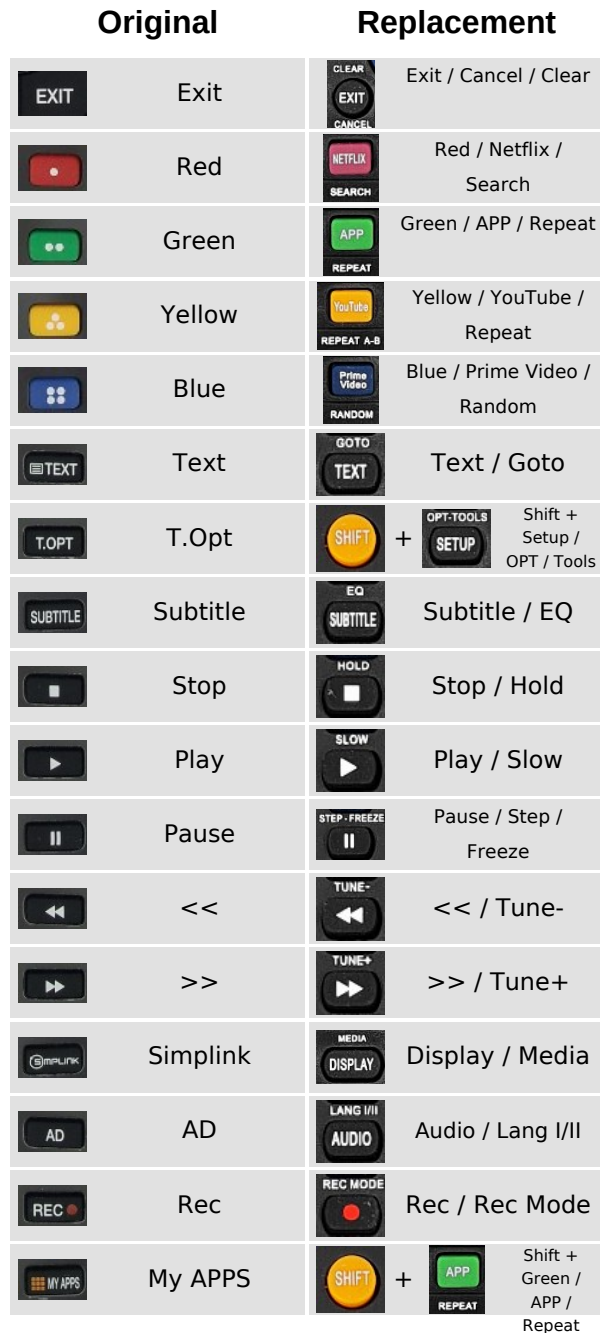



Power **DIMMER MUTE** **SHIFT**

TV **DVD** **SAT** **AUX**

SLOW **STEP - FREEZE** **HOLD** **REC MODE**

Play **Pause** **Stop** **Red Dot**

TUNE- **TUNE+** **PRESET-** **PRESET+**

First **Previous** **Next** **Last**

TITLE **LANG /VI** **EQ** **SURROUND**

SOUND **AUDIO** **SUBTITLE** **Up Arrow**

FORMAT **SIZE** **TIMER** **PROGRAM**

PICTURE **ZOOM** **SLEEP** **TV/ RADIO**

TOP MENU **OPT-TOOLS** **GOTO** **RDS**

D.MENU **SETUP** **TEXT** **AV INPUT**

HOME **ANGLE**

MENU **INFO**

OK

CLEAR **RETURN**

EXIT **BACK**

CANCEL **LIST**

+ **SMART** **+**

VOL **MEDIA** **CH**

- **DISPLAY** **-**

TV **DVD** **CD - STB**

1 **2** **3**

VIDEO **TAPE** **TUNER**

4 **5** **6**

AUX - HDD **USB** **BLUETOOTH**

7 **8** **9**

PC

GUIDE **HDMI - SAT** **PC**

EPG **0** **FAV MARKER**

NETFLIX **APP** **YouTube** **Prime Video**

SEARCH **REPEAT** **REPEAT A-B** **RANDOM**

Mandis

shop

www.mandis.tv