



| Original  | Replacement      | Original  | Replacement           |
|---|------------------|---|-----------------------|
|      | Power            |      | Power                 |
|      | Mute             |      | Mute / Dimmer         |
|      | Play             |      | Play / Slow           |
|      | Pause            |      | Pause / Step / Freeze |
|      | Stop             |      | Stop / Hold           |
|      | Rec              |      | Rec / Rec Mode        |
|      | <<               |      | << / Tune-            |
|      | >>               |      | >> / Tune+            |
|      | Lang             |      | Audio / Lang I/II     |
|      | Source (Games)   |      | Eject / Surround      |
|     | Movie-Music-Phot |     | Picture / Format      |
|    | [≡]..            |    | Zoom / Size           |
|    | * / O            |    | Sleep / Timer         |
|    | TV               |    | TV/Radio /            |
|    | Q.Menu           |    | D.Menu / Top          |
|    | [-O-]            |    | Setup / OPT /         |
|    | [≡]/Text         |    | Text / Goto           |
|    | Menu             |    | Menu / Home           |
|    | Up               |    | Up                    |
|    | i                |    | Info / Angle          |
|    | Left             |    | Left                  |
|    | OK               |    | OK                    |
|    | Right            |    | Right                 |
|    | Exit             |    | Exit / Cancel / Clear |
|    | Down             |    | Down                  |
|    | Back             |    | Back / Return         |
|    | Vol+             |    | Vol+                  |
|   | World (Violet)   |   | Smart / List          |
|  | PR+              |  | CH+ / Page+           |
|  | Vol-             |  | Vol-                  |
|  | * / Q            |  | Display / Media       |
|  | PR-              |  | CH- / Page-           |
|  | 1                |  | 1                     |
|  | 2                |  | 2                     |





|   | Original | Replacement   | Original | Replacement |
|---|----------|---|----------|-------------|
|    | 3        |  CD - STB  |          |             |
|    | 4        |  VIDEO   |          |             |
|    | 5        |  TAPE  |          |             |
|    | 6        |  TUNER   |          |             |
|    | 7        |  AUX - HDD   |          |             |
|    | 8        |  USB   |          |             |
|    | 9        |  BLUETOOTH   |          |             |
|    | Guide    |  GUIDE EPG   |          |             |
|    | 0        |  HDMI - SAT  |          |             |
|    | Red      |  NETFLIX SEARCH  |          |             |
|  | Green    |  APP REPEAT  |          |             |
|  | Yellow   |  YouTube REPEAT A-B  |          |             |
|  | Blue     |  Prime Video RANDOM  |          |             |
|  | Recall   |  SHIFT +  RETURN BACK |          |             |
|   |          |   |          |             |
|   |          |   |          |             |
|   |          |   |          |             |
|   |          |   |          |             |

