
















 



 



 


 
 








 








































 

 

 

 




 





 
 


Original		Replacement		Original		Replacement	
	Power		Power		Tv Guide		Guide / EPG / -/--
	Mute		Mute / Dimmer		0		0
	DTV		Shift + 1		Recall		Back / Return
	DTV		TV/Radio /		Vol+		Vol+
	Radio		Shift + TV/Radio / Program		P.Mode		Picture / Format
	Radio		Shift + 6		CH+		CH+ / Page+
	USB		Shift + 8		S.Mode		Sound / Title
	DVD		Shift + 2		Vol-		Vol-
	1		1		FAV		Fav / Marker / PC
	2		2		CH-		CH- / Page-
	3		3		Menu		Menu / Home
	4		4		Up		Up
	5		5		Exit		Exit / Cancel / Clear
	6		6		Left		Left
	7		7		OK		OK
	8		8		Right		Right
	9		9		Source		AV / Input / RDS





Original	Replacement
 Down	 Down
 Info	 Info / Angle
 Aspect	 Shift + Picture / Format
 Sleep	 Sleep / Timer
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Text	 Text / Goto
 Text Hold	 Shift + Stop /
 Zoom/Text/DVD	 Zoom / Size
 Power/Display	 Display / Media
 Power/Display	 Shift + Power
 DVD Menu	 D.Menu / Top
 Rec	 Rec / Rec Mode
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stop/Eject	 Stop / Hold
 Stop/Eject	 Eject / Surround

Original	Replacement
 Rec List/DVD	 Setup / OPT /
 Rec List/DVD	 Smart / List
 << PVR/DVD	 << / Tune-
 >> PVR/DVD	 >> / Tune+
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Red/Goto	 Shift + Text /
 Red/Goto	 Red / Netflix / Search
 Green/A-B	 Green / APP / Repeat
 Green/A-B	 Shift + Yellow / YouTube / YouTube /
 Yellow/Angle/3D	 Yellow / YouTube / Repeat
 Yellow/Angle/3D	 Shift + Info / Angle
 Blue/Repeat	 Blue / Prime Video / Random
 Blue/Repeat	 Shift + Green / APP /

