

 











 





Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	TV		TV/R
	Menu		Menu
	Q.Menu		D. Menu
	World		Shift + Guide

Original	Replacement	Original	Replacement
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Exit		Exit
	Back		Back
	Mute		Mute
	i		Info
	Guide		Guide
	[≡]/Text		Text
	Folder		Format
	[-O-]		Subt





Original		Replacement		Original	Replacement
	* / O		Sleep		
	* / Q		Eject		
	Netflix		Media		
	Camera-Music-Ph		Options		
	YouTube		3D		
	[≡]..		List		
	Lang		Dual		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Play		Play		
	Rec		Rec		
	Pause		Pause		
	>>		>>		
	<<		<<		
	Stop		Stop		

