



| Original | Replacement | Original | Replacement |
|---|---|---|---|
|  Power |  Power |  0 |  0 |
|  Mute |  Mute |  -/-- |  Guide |
|  Up |  Up |  -/-- |  Exit |
|  Down |  Down |  P<P/Swap |  Pre Ch |
|  Right |  Right |  Vol+ |  Vol + |
|  Left |  Left |  Vol- |  Vol - |
|  OK/Select |  Ok |  P+ |  Ch + |
|  M |  Menu |  P- |  Ch - |
|  1 |  1 |  PP |  Eject |
|  2 |  2 |  I-II |  Dual |
|  3 |  3 |  Tv/DTV |  TV/R |
|  4 |  4 |  [≡] |  Text |
|  5 |  5 |  [≡0] |  Options |
|  6 |  6 |  AV/Source |  AV |
|  7 |  7 |  [≡+]/[X] |  Format |
|  8 |  8 |  [≡X]/[■] |  3D |
|  9 |  9 |  [≡]/[■] |  Subt |



