







 

 

 
 

 



 


 



 





 




 







 



 



 












 



 



Original		Replacement		Original		Replacement	
	Power		Power		Recall		Back / Return
	Mute		Mute / Dimmer		Display		Display / Media
	Nicam/A2		Shift + Audio / Lang I/II		Freeze		Pause / Step / Freeze
	Aspect		Shift + Picture / Format		Rec/Auto		Rec / Rec Mode
	P.Mode		Picture / Format		Red		Red / Netflix / Search
	S.Mode		Sound / Title		Green		Green / APP / Repeat
	1		1		Yellow		Yellow / YouTube / Repeat
	2		2		Blue		Blue / Prime Video / Random
	3		3		Sleep		Sleep / Timer
	4		4		Up		Up
	5		5		Source		AV / Input / RDS
	6		6		Left		Left
	7		7		Enter		OK
	8		8		Right		Right
	9		9		Down		Down
	-/--		Shift + Guide / EPG / -/--		Menu		Menu / Home
	0		0		Exit		Exit / Cancel / Clear





Original	Replacement
 CH+ / Page+	 CH+ / Page+
 Subtitle	 Subtitle / EQ
 Vol+	 Vol+
 CH- / Page-	 CH- / Page-
 T.Shift	 Setup / OPT /
 Vol-	 Vol-
 Play/Pause/Hold	 Play / Slow
 Play/Pause/Hold	 +  Shift + Stop /
 <</Reveal	 << / Tune-
 >>/Size	 Zoom / Size
 >>/Size	 >> / Tune+
 Stop/Index	 Stop / Hold
 I<<	 I<< / Preset-
 S.PAGE/>>>I	 >>I / Preset+
 Text	 Text / Goto
 FAV	 Fav / Marker / PC
 Audio	 Audio / Lang I/II

Original	Replacement
 DTV	 Smart / List
 EPG	 Guide / EPG / -/-
 Tv/Radio	 TV/Radio /

