



Original	Replacement
Power	Power
TV	TV/Radio /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
[]	Display / Media
0	0
PRE-CH	Back / Return
Vol+	Vol+
Mute	Mute / Dimmer
PR+	CH+ / Page+

Original	Replacement
Vol-	Vol-
Source	AV / Input / RDS
PR-	CH- / Page-
CH List	Smart / List
Menu	Menu / Home
FAV CH	Fav / Marker / PC
Tools	Setup / OPT /
Return	Shift + Back / Return
Up	Up
Left	Left
Enter	OK
Right	Right
Info	Info / Angle
Down	Down
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat





Original	Replacement
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	TTX/MIX / Text / Goto
	SRS / Sound / Title
	P.Size / Zoom / Size
	Dual/I/II / Audio / Lang I/II
	Guide / Guide / EPG / -/--
	Subt / Subtitle / EQ
	<< / Tune-
	Pause / Step / Freeze
	>> / Tune+
	Rec / Rec Mode
	Play / Slow
	Stop / Hold

Original	Replacement

