 






Original	Replacement	Original	Replacement
 Power	 Power	 ←PR	 RETURN BACK Back
 Mute	 MUTE Mute	 FAV	 FAV PRE-CH Pre Ch
 1	 1	 PR+	 Up
 2	 2	 PR+	 + CH Ch +
 3	 3	 PR-	 - CH Ch -
 4	 4	 PR-	 Down
 5	 5		 Right
 6	 6		 Left
 7	 7		 + VOL Vol +
 8	 8		 - VOL Vol -
 9	 9	 FIND	 A Red
 0	 0	 ZOOM	 B Green
 Tv/Radio	 SEARCH TV/R TV/R	 TXT	 C Yellow
 EPG	 -/-- GUIDE Guide	 TXT	 REPEAT TEXT Text
 Menu	 TOP MENU MENU Menu		 D Blue
 Exit	 CLEAR EXIT Exit		 SOUND DUAL Dual
 OK/List	 OK Ok	 INFO	 DISPLAY INFO Info





Original		Replacement		Original		Replacement	
	Tv/AV		AV				
	Sleep		Sleep				
	[+]		Options				
	Record		Rec				
	Play		Play				
	Stop		Stop				
	Shift		Media				
	<< Fast		<<				
	Fast >>		>>				
	< Slow		I<<				
	Slow >		>>I				
	Pause		Pause				
	↑/Page+		3D				
	↓/Page-		Format				

