


 
 
 
 


 
 



 

 
 

 

 

 

 

 








Original	Replacement
 CBL-SAT	 Shift + 0
 BD-DVD	 Shift + 2
 GAME	 Smart / List
 TV	 TV/Radio /
 V	 Picture / Format
 AUX	 Shift + 7
 Tv Input	 AV / Input / RDS
 Power Audio	 Power
 Power Source	 Shift + Power
 ↑	 Shift + Up
 Menu	 Menu / Home
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK/Enter	 OK
 Right	 Right
 Info	 Info / Angle

Original	Replacement
 Down	 Down
 Exit	 Exit / Cancel / Clear
 ↓	 Shift + Down
 Vol+	 Vol+
 (+)	 Shift + CH+ /
 DVR	 D.Menu / Top
 CH+	 CH+ / Page+
 Vol-	 Vol-
 System	 Display / Media
 CH-	 CH- / Page-
 Mute	 Mute / Dimmer
 Back	 Back / Return
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 I<	 I<< / Preset-
 Pause	 Pause / Step / Freeze





Original	Replacement
>	>>  / Preset+
Rec	Rec / Rec Mode
Stop	Stop / Hold
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
--	Shift + Guide / EPG / -/--
0	0
OK/Enter	Shift + OK
CC	Subtitle / EQ
[↔]	Shift + Display / Media

Original	Replacement
≡	Text / Goto
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

