

 







 

 





 











 



 



 














 
 



 
 


 



 



















Original	Replacement	Original	Replacement
 Open/Close	 Eject / Surround	 0	 0
 Input Select	 AV / Input / RDS	 Clear	 Exit / Cancel / Clear
 HDMI	 Shift + 0	 [i+]/Info	 Info / Angle
 Standby	 Power	 Text	 Text / Goto
 1	 1	 Variable Replay	 Vol+
 2	 2	 Variable Skip	 Vol-
 3	 3	 Guide	 Guide / EPG / -/-
 Prog+	 CH+ / Page+	 Top Menu	 D.Menu / Top
 4	 4	 Disc Menu	 Menu / Home
 5	 5	 Up	 Up
 6	 6	 Left	 Left
 Prog-	 CH- / Page-	 Enter	 OK
 7	 7	 Right	 Right
 8	 8	 Display	 Display / Media
 9	 9	 Down	 Down
 Timer Prog	 Sleep / Timer	 Return	 Back / Return
 Setup	 Setup / OPT /	 Red	 Red / Netflix / Search





Original	Replacement	Original	Replacement
 Green	 Green / APP / Repeat	 Rec	 Rec / Rec Mode
 Yellow/Mode	 Yellow / YouTube / Repeat	 Subtitle	 Subtitle / EQ
 Blue/Search	 Blue / Prime Video / Random	 1.3x/0.8x PLY	 Shift + Play /
 Blue/Search	 Shift + Red / Netflix /	 O)/Audio	 Audio / Lang I/II
 <<	 << / Tune-	 Sat Link	 Smart / List
 Play	 Play / Slow		
 >>	 >> / Tune+		
 I<<	 I<< / Preset-		
 Stop	 Stop / Hold		
 >>I	 >>I / Preset+		
 Pause	 Pause / Step / Freeze		
 VCR	 Shift + 4		
 HDD	 Shift + 7		
 DVD	 Shift + 2		
 Time Slip	 TV/Radio /		
 Dubbing	 Picture / Format		
 Rec Mode	 Shift + Rec / Rec Mode		

