
 





 







 


 

 





 







 









 



 

 















Original	Replacement
 Power	 Power
 DVD (Universal Mode)	 Shift + 2
 STB (Universal Mode)	 Shift + 3
 HTS (Universal Mode)	 Shift + 4
 Red/Demo	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow/[ I ]	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Home	 Menu / Home
 Guide	 Guide / EPG / -/--
 Options	 Setup / OPT /
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down

Original	Replacement
 [i]/Info	 Info / Angle
 <<	 << / Tune-
 Play/Pause	 Play / Slow
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+
 Vol-	 Vol-
 [<>]/Format	 Picture / Format
 PR-	 CH- / Page-
 Net TV	 Smart / List
 Teletext	 Text / Goto
 Disc Menu	 D.Menu / Top
 1	 1
 2	 2





Original		Replacement	
<b>3</b> DEF	3	<b>3</b> CD - STB	3
<b>4</b> GHI	4	<b>4</b> VIDEO	4
<b>5</b> JKL	5	<b>5</b> TAPE	5
<b>6</b> MNO	6	<b>6</b> TUNER	6
<b>7</b> PQRS	7	<b>7</b> AUX - HDD	7
<b>8</b> TUV	8	<b>8</b> USB	8
<b>9</b> WXYZ	9	<b>9</b> BLUETOOTH	9
SUBTITLE	Subtitle	<b>SUBTITLE</b> EQ	Subtitle / EQ
<b>0</b> . @	0	<b>0</b> HDMI - BAT	0
	Source	<b>RDS AV INPUT</b>	AV / Input / RDS
	Ambilight	<b>MEDIA DISPLAY</b>	Display / Media

Original		Replacement	

