








 




Original	Replacement	Original	Replacement
	Power		Power
	Scan		Display / Media
	Shuffle		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Track Incr.		Smart / List
	0		0
	Scroll		Back / Return
	CDR		AV / Input / RDS
	Play		Play / Slow
	CD		Shift + 3
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	>>		>> / Tune+
	Menu/Store		Menu / Home
	Pause		Pause / Step / Freeze
	Prog		TV/Radio /
	Enter		OK
	Cancel		Exit / Cancel / Clear

