













 









 




 


 









 









 







 







 




 

 
 








Original	Replacement	Original	Replacement
 Source	 AV / Input / RDS	 Guide	 Guide / EPG / -/--
 Power	 Power	 Up	 Up
 Theatre	 Sleep / Timer	 [i+]	 Info / Angle
 <<	 << / Tune-	 Left	 Left
 Play	 Play / Slow	 OK	 OK
 >>	 >> / Tune+	 Right	 Right
 Sync Menu	 D.Menu / Top	 Return	 Back / Return
 I<<	 I<< / Preset-	 Down	 Down
 Stop	 Stop / Hold	 Options	 Setup / OPT /
 >>I	 >>I / Preset+	 Home	 Menu / Home
 I-Manual	 TV/Radio /	 Red	 Red / Netflix / Search
 Scene	 Picture / Format	 Green	 Green / APP / Repeat
 [+]	 Zoom / Size	 Yellow	 Yellow / YouTube / Repeat
 Digital/Analog	 Smart / List	 Blue	 Blue / Prime Video / Random
 Exit	 Exit / Cancel / Clear	 1	 1
 Internet/Video	 Display / Media	 2	 2
 FAV	 Fav / Marker / PC	 3	 3





Original		Replacement		Original		Replacement	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Text		Text / Goto				
	0		0				
	Subtitle		Subtitle / EQ				
	Vol+		Vol+				
	Pr+		CH+ / Page+				
	Mute		Mute / Dimmer				
	Audio		Audio / Lang I/II				
	Vol-		Vol-				
	Pr-		CH- / Page-				

