 


 
 












 
 






















 



 











 














Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Eject	 Eject	 Setup	 Options
 Angle	 3D	 Return	 Back
 Repeat	 Shift + Text	 PgUp/Title	 Guide
 Q-Play	 Media	 PgDn/Menu	 Menu
 Search	 Shift + TV/R	 Ch +	 Ch +
 Zoom	 Shift + Eject	 Ch -	 Ch -
 List/PBC	 List	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 Enter	 Ok
 5	 5	 Vol +	 Vol +
 6	 6	 Vol -	 Vol -
 7	 7	 Exit/Slow	 Exit
 8	 8	 Sleep-P/N	 Sleep
 9	 9	 Tv/Radio	 TV/R





Original	Replacement
TTX	Text
Audio	Dual
Subtitle	Subt
Info/Display	Info
Fav/A-B	Pre Ch
Mute	Mute
Play	Play
Pause	Pause
Stop	Stop
I<<	I<<
>>I	>>I
<<	<<
>>	>>
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue

Original	Replacement
Video	Smart
Usb	AV
DVD/DVB	Format
Random	D. Menu

