
 



 

 

 






















Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		Left		Left
	Power		Power		OK		OK
	1		1		Vol+		Vol+
	2		2		Right		Right
	3		3		CH-		CH- / Page-
	4		4		Down		Down
	5		5		EPG		Guide / EPG / -/--
	6		6		Red		Red / Netflix / Search
	7		7		TTX		Text / Goto
	8		8		Blue		Blue / Prime Video / Random
	9		9		Audio		Audio / Lang I/II
	Menu		Menu / Home		Green		Green / APP / Repeat
	0		0		Yellow		Yellow / YouTube / Repeat
	Exit		Exit / Cancel / Clear		Subtitle		Subtitle / EQ
	Up		Up		i		Info / Angle
	CH+		CH+ / Page+		FAV		Fav / Marker / PC
	Vol-		Vol-		Tv/Radio		TV/Radio /





Original	Replacement
 Video	 Shift + 4
 Scan	 AV / Input / RDS
 Record	 Rec / Rec Mode
 Device	 Smart / List
 File	 Display / Media
 Zoom	 Zoom / Size
 Prev	 I<< / Preset-
 Next	 >>I / Preset+
 Roll	 Sound / Title
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 >>	 >> / Tune+

Original	Replacement

