



Original	Replacement	Original	Replacement
Power	Power	Play	Play
Open/Close	Eject	Stop	Stop
1	1	Pause	Pause
2	2	Info/Menu	Info
3	3	Home	Smart
4	4	Enter	Ok
5	5	Up	Up
6	6	Down	Down
7	7	Right	Right
8	8	Left	Left
9	9	Back	Back
0	0	Disc Menu	D. Menu
AV Input	AV	Red	Red
>>	>>	Green	Green
<<	<<	Yellow	Yellow
I<<	I<<	Blue	Blue
>>I	>>I	Repeat	Text





Original	Replacement	Original	Replacement
O))/Audio	Dual		
[...] /Subtitle	Subt		
Title/Pop-Up	TV/R		
Power TV	Shift + Power		
PR+ Tv	Ch +		
PR- Tv	Ch -		
Vol+ Tv	Vol +		
Vol- Tv	Vol -		
Clear	Exit		

