





 

 




 

 

 
 
 
 
 
 
 
 

 
 
 
 

 
 

 




Original	Replacement
 Power	 Power
 Power Tv	 +  Shift + Power
 Input Tv	 AV
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Audio	 Dual
 Subtitle	 Subt
 Vol+	 Vol +

Original	Replacement
 Vol-	 Vol -
 ♥	 Pre Ch
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Top Menu	 +  Shift + Menu
 Pop Up/Menu	 Menu
 Return	 Back
 Options	 Options
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Home	 Smart
 I<<	 I<<





Original	Replacement	Original	Replacement
 >>I	 >>I		
 Pause	 Pause		
 <<	 <<		
 >>	 >>		
 Play	 PLAY MODE Play		
 Stop	 Stop		
 Display	 DISPLAY INFO Info		
 SEN	 SEARCH TV/R TV/R		

Original	Replacement

