





 

 

 



 

 



 









 









| Original | Replacement |
|---|---|
|  Power |  Power |
|  Rec |  Rec / Rec Mode |
|  Red |  Red / Netflix / Search |
|  I<< |  I<< / Preset- |
|  Green/[] |  Green / APP / Repeat |
|  Stop |  Stop / Hold |
|  Yellow |  Yellow / YouTube / Repeat |
|  Play/[≡] |  Play / Slow |
|  Blue/[■] |  Blue / Prime Video / Random |
|  >>I |  >>I / Preset+ |
|  AV/[?] |  AV / Input / RDS |
|  I-II/[≡≡] |  Audio / Lang I/II |
|  [<>]/[+] |  Picture / Format |
|  [-S-] |  Zoom / Size |
|  Menu |  Menu / Home |
|  [≡] |  Text / Goto |
|  Pause |  Pause / Step / Freeze |

| Original | Replacement |
|---|--|
|  Left |  Left |
|  Up |  Up |
|  Right |  Right |
|  OK |  OK |
|  Down |  Down |
|  Vol+ |  Vol+ |
|  Mute |  Mute / Dimmer |
|  P+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  Smart ♪ |  Sound / Title |
|  P- |  CH- / Page- |
|  Smart [] |  Smart / List |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |



 

 



 

 

 

 







 

 





 
 


| Original | Replacement | Original | Replacement |
|---------------|---|---|--|
| 0 |  Eject / Surround |  [≡] |  Text / Goto |
| -0- |  Subtitle / EQ |  Left |  Left |
| Power |  Power |  Up |  Up |
| Rec |  Rec / Rec Mode |  Right |  Right |
| I<< |  I<< / Preset- |  OK |  OK |
| Red |  Red / Netflix / Search |  Down |  Down |
| Green/[[]] |  Green / APP / Repeat |  Vol+ |  Vol+ |
| Stop |  Stop / Hold |  Mute |  Mute / Dimmer |
| Play |  Play / Slow |  P+ |  CH+ / Page+ |
| Yellow / List |  Yellow / YouTube / Repeat |  Vol- |  Vol- |
| >>I |  >>I / Preset+ |  Smart J |  Sound / Title |
| AV/[?] |  AV / Input / RDS |  P- |  CH- / Page- |
| I-II/[≡≡] |  Audio / Lang I/II |  Smart [] |  Smart / List |
| [<>]/[+] |  Zoom / Size |  1 |  1 |
| PIP [■] |  Picture / Format |  2 |  2 |
| Menu |  Menu / Home |  3 |  3 |
| Pause |  Pause / Step / Freeze |  4 |  4 |





| Original | Replacement |
|--|---|
|  Power |  Power |
|  -O- |  Subtitle / EQ |
|  I<< |  I<< / Preset- |
|  >>I |  >>I / Preset+ |
|  AV/[?] |  AV / Input / RDS |
|  I-II/[≡ ≡] |  Audio / Lang I/II |
|  [<>]/[+] |  Zoom / Size |
|  Pause |  Pause / Step / Freeze |
|  [≡] |  Text / Goto |
|  Left |  Left |
|  Up |  Up |
|  Right |  Right |
|  OK |  OK |
|  Down |  Down |
|  Vol+ |  Vol+ |
|  Mute |  Mute / Dimmer |
|  P+ |  CH+ / Page+ |

| Original | Replacement |
|---|---|
|  Vol- |  Vol- |
|  Smart J |  Sound / Title |
|  P- |  CH- / Page- |
|  Smart [] |  Smart / List |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  P<P |  Fav / Marker / PC |

