 

 

 

 



 

 

 

 

 



 



 

 



 

 








Original	Replacement
 Source	 AV / Input / RDS
 Power	 Power
 [...]	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Sync Menu	 Shift + D.Menu / Top Menu
 Related Search	 Shift + Red / Netflix /
 Tv Pause	 Shift + Pause / Step /
 <<<	 <<< / Tune-
 Play	 Play / Slow
 >>>	 >>> / Tune+
 Title List	 Sound / Title
 Rec	 Rec / Rec Mode
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Replacement
 Blue	 Blue / Prime Video / Random
 Social View	 Picture / Format
 Football	 Fav / Marker / PC
 SEN/APPS	 Shift + Green / APP /
 Discover	 Display / Media
 Guide	 Guide / EPG / -/-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return/Back	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home	 Menu / Home
 Digital/Analog	 Smart / List
 [i+]/[?]	 Info / Angle
 ?/i-Manual	 D.Menu / Top





Original	Replacement
 Exit	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Tv/Radio	 TV/Radio /
 0	 0
 [=]/Text	 Text / Goto
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 PR+	 CH+ / Page+
 Vol-	 Vol-

Original	Replacement
 PR-	 CH- / Page-
 Recall	 Shift + Back / Return

