




 



 

 





 



 

 

 



 



 



 



 



 

 







 





 


 


 




Original		Replacement		Original		Replacement	
	Standby/On		Power		I<<		I<<
	1		1		>>I		>>I
	2		2		Play		Play
	3		3		Stop		Stop
	4		4		<<		<<
	5		5		>>		>>
	6		6		Mute		Mute
	7		7		Prog+		Ch +
	8		8		Prog-		Ch -
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	Tv/DVD		TV/R		Menu		Menu
	Open/Close		Eject		Return		Back
	DTV/Analog		Smart		Exit		Exit
	Input Sel		AV		Title List/Disc Menu		Media
	Copy		Options		Play List/Title Menu		Shift + Menu
	Pause		Pause		Red		Red






















 

 

 


 





 

 

Original	Replacement
Green	Green
Yellow	Yellow
Blue	Blue
Guide	Guide
Info	Info
Subtitle	Subt
Text	Text
Tv/Radio	Sleep
FAV List	Pre Ch
Marker	Shift + Options
Rec	Rec
Audio	Dual
Rec Mode	Shift + Rec
Rec	Format
Repeat	Shift + Text
OK	Ok
Up	Up

Original	Replacement
Down	Down
Right	Right
Left	Left
USB	Shift + Media
Timer	Shift + AV
HDD	Shift + Smart














 

 



 



















 



 

 










 
 







 


 





	Original	Replacement	Original	Replacement
	Input Sel	 AV		
	1	 1		
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	0	 0		
	Prog+	 Ch +		
	Prog-	 Ch -		
	Standby/On TV	 Power		
	Mute Tv	 Mute		
	Tv Vol+	 Vol +		
	Tv Vol-	 Vol -		






 
 




 



 


 

Original	Replacement	Original	Replacement
 Standby/On	 Power	 I<<	 I<<
 1	 1	 >>I	 >>I
 2	 2	 Play	 Play
 3	 3	 Stop	 Stop
 4	 4	 <<	 <<
 5	 5	 >>	 >>
 6	 6	 Prog+	 Ch +
 7	 7	 Prog-	 Ch -
 8	 8	 Menu	 Menu
 9	 9	 Return	 Back
 0	 0	 Exit	 Exit
 Tv/DVD	 TV/R	 Title List/Disc Menu	 Media
 Open/Close	 Eject	 Play List/Title Menu	 Shift + Menu
 DTV/Analog	 Smart	 Red	 Red
 Input Sel	 AV	 Green	 Green
 Copy	 Options	 Yellow	 Yellow
 Pause	 Pause	 Blue	 Blue







Original		Replacement	
	Guide		Guide
	Info		Info
	Subtitle		Subt
	Text		Text
	Tv/Radio		D. Menu
	FAV List		Pre Ch
	Marker		Shift + Options
	Rec		Rec
	Audio		Dual
	Rec Mode		Shift + Rec
	Rec		Format
	Repeat		Shift + Text
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left

Original		Replacement	
	USB		Shift + Media
	Timer		Shift + AV
	HDD		Shift + Smart

