








 









Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 PIP-	 Shift + CH- /
 PIP	 Zoom / Size
 PIP+	 Shift + CH+ /
 Wide	 Picture / Format
 Swap	 Smart / List
 Lang(AD)	 Audio / Lang I/II
 Timers	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 Text	 Text / Goto
 0	 0
 AV	 AV / Input / RDS
 i	 Info / Angle
 Vol+	 Vol+
 Tv/Radio	 TV/Radio /
 PR+	 CH+ / Page+
 Vol-	 Vol-
 FAV	 Fav / Marker / PC
 PR-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Guide	 Guide / EPG / -/-
 Up	 Up





Original		Replacement		Original	Replacement
	Exit		Exit / Cancel / Clear		
	Left		Left		
	OK		OK		
	Right		Right		
	Menu		Menu / Home		
	Down		Down		
	Back/P<P		Back / Return		
	Subtitle		Subtitle / EQ		
	<<		<< / Tune-		
	Play		Play / Slow		
	>>		>> / Tune+		
	LIB		Setup / OPT /		
	Stop		Stop / Hold		
	Pause		Pause / Step / Freeze		
	Rec		Rec / Rec Mode		

