


















 


 
 












Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Exit		Exit / Cancel / Clear
	Nicam/A2		Shift + Audio / Lang I/II		1		1
	Sleep		Sleep / Timer		2		2
	Aspect		Zoom / Size		3		3
	USB/CR		Shift + 8		4		4
	Display		Display / Media		5		5
	Auto		Smart / List		6		6
	PMode		Picture / Format		7		7
	SMode		Sound / Title		8		8
	DTV		D.Menu / Top		9		9
	Source		AV / Input / RDS		0		0
	Up		Up		-/-		Guide / EPG / -/-
	Left		Left		Back		Back / Return
	Enter		OK		CH+		CH+ / Page+
	Right		Right		Info		Info / Angle
	Down		Down		Audio		Audio / Lang I/II





Original	Replacement	Original	Replacement
 Vol+	 Vol+	 Yellow	 Yellow / YouTube / Repeat
 CH-	 CH- / Page-	 Cyan	 Blue / Prime Video / Random
 FAV	 Fav / Marker / PC		
 Tv/Radio	 TV/Radio /		
 Vol-	 Vol-		
 Text	 Text / Goto		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop/EPG	 Stop / Hold		
 Subtitle	 Subtitle / EQ		
 Rec/Hold	 Rec / Rec Mode		
 <</Index	 << / Tune-		
 >>/Size	 >> / Tune+		
 <</Reveal	 << / Preset-		
 >> /Sbpage	 >> / Preset+		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		

Original	Replacement
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random

