

 

 

 



 

 

 

 

 



 

 

 







 

 

 



 



 

 

 



 

 







 







Original	Replacement	Original	Replacement
 Power	 Power	 1	 1
 Mute	 Mute / Dimmer	 2	 2
 PG+	 CH+ / Page+	 3	 3
 DTV/VCR	 Smart / List	 Epg	 Guide / EPG / -/--
 Vol+	 Vol+	 4	 4
 PG-	 CH- / Page-	 5	 5
 Info	 Info / Angle	 6	 6
 Vol-	 Vol-	 Recall	 Back / Return
 Menu	 Menu / Home	 7	 7
 Up/Ch+	 Up	 8	 8
 Exit	 Exit / Cancel / Clear	 9	 9
 Left	 Left	 0	 0
 Ok	 Ok	 Audio	 Audio / Lang I/II
 Right	 Right	 Tv/Radio	 TV/Radio /
 Record	 Rec / Rec Mode	 Fav	 Fav / Marker / PC
 Down/Ch-	 Down	 File	 Display / Media
 Times Shift	 Sleep / Timer	 Text	 Text / Goto





	Original	Replacement	Original	Replacement
	Subtitle	 Subtitle / EQ		
	<<	 << / Tune-		
	>>	 >> / Tune+		
	Red	 Red / Netflix / Search		
	Stop	 Stop / Hold		
	Green	 Green / APP / Repeat		
	Step	 +  Shift + Pause / Step /		
	Yellow	 Yellow / YouTube / Repeat		
	Pause	 Pause / Step / Freeze		
	Blue	 Blue / Prime Video / Random		
	Play	 Play / Slow		

