




 



 






 



 





 
 

 

 



 

 


 
 


 

 

 
 






 
 




 

 

 
 




Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Display		Info
	Recall		Pre Ch
	Setup		Options
	EPG		Guide
	Source		AV
	CH.List		List
	Exit/Cancel		Exit
	FAV		Shift + Pre Ch
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+/Page+		Ch +
	CH-/Page-		Ch -
	S.Mode		Shift + Dual
	P.Mode		Format
	Vol+		Vol +
	Vol-		Vol -
	Record		Rec
	Record List		Smart
	Audio		Dual





Original	Replacement
S.Title/Subtitle	Subt
Reveal	Menu
Index	3D
Mix	Shift + Subt
Text	Text
Play	Play
Pause	Pause
Stop	Stop
<<<	<<<
>>>	>>>
I<<<	I<<<
>>I	>>I
Red/Goto	Red
Green/A-B	Green
Yellow/Repeat	Yellow
Blue/Angle	Blue
S.Page/DVD	D. Menu

Original	Replacement
Hold/Title	Back
Zoom-	Shift + Down
Size/Zoom+	Shift + Up
Eject	Eject
Sleep	Sleep
Scaler	Media
Tv/Radio	TV/R

