



 









 
 









| Original   | Replacement   |
|--|---|
|  Power      |  Power   |
|  Mute       |  Mute    |
|  1          |  1       |
|  2          |  2       |
|  3          |  3       |
|  4          |  4       |
|  5          |  5       |
|  6          |  6       |
|  7          |  7       |
|  8         |  8      |
|  9        |  9     |
|  0        |  0     |
|  Menu     |  Menu  |
|  Exit     |  Exit  |
|  Up/CH+   |  Up    |
|  Down/CH- |  Down  |
|  Right    |  Right |

| Original   | Replacement  |
|--|--|
|  Left       |  Left     |
|  OK         |  Ok       |
|  P+         |  Ch +     |
|  P-         |  Ch -     |
|  Vol+       |  Vol +    |
|  Vol-       |  Vol -    |
|  SAT        |  Smart    |
|  FAV        |  Pre Ch   |
|  EPG        |  Guide    |
|  [ ]/♪     |  Dual    |
|  Tv/AV    |  AV     |
|  Play     |  Play   |
|  Pause    |  Pause  |
|  Back     |  Back   |
|  UHF      |  TV/R   |
|  i        |  Info   |
|  PAL/NTSC |  Format |



