



 

 

 


 


 

 

 

 




 





 

 

 

 

 

 

 

 

 

 

 

 

 

 

 

 



Original	Replacement
 Open/Close	 Eject / Surround
 Power	 Power
 Tv/VCR	 AV / Input / RDS
 VCR	 Shift + 4
 DVD	 Shift + 2
 Clock Counter	 Info / Angle
 Program	 TV/Radio /
 One Touch	 Green / APP / Repeat
 Instant Skip	 Text / Goto
 Setup/VCR	 Setup / OPT /
 Zoom	 Zoom / Size
 I> Slow	 Blue / Prime Video / Random
 Top Menu	 D.Menu / Top
 Up	 Up
 CH+	 CH+ / Page+
 DVD Menu	 Menu / Home
 Left/Set-	 Left

Original	Replacement
 Enter	 OK
 Right/Set+	 Right
 Clear/Cancel	 Exit / Cancel / Clear
 CH-	 CH- / Page-
 Down	 Down
 Return	 Back / Return
 Stop	 Stop / Hold
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 I<< Skip/Index-	 I<< / Preset-
 << / Tune-	 << / Tune-
 >> / Tune+	 >> / Tune+
 Skip	 >>I / Preset+
 Rec/OTR	 Rec / Rec Mode
 Timer Rec	 Sleep / Timer
 Play	 Red / Netflix / Search
 A-B RPT	 Yellow / YouTube / Repeat





	Original	Replacement	Original	Replacement
	1	 1		
	2	 2		
	3	 3		
	Display/Call	 Display / Media		
	4	 4		
	5	 5		
	6	 6		
	Jump/Zero Return	 Guide / EPG / -/-		
	7	 7		
	8	 8		
	9	 9		
	0/AUX	 0		
	Camera/Angle/Counter Reset	 Picture / Format		
	[...]/Subtitle/ATR	 Subtitle / EQ		
	0)/Audio/Audio Select	 Audio / Lang I/II		
	Marker	 Fav / Marker / PC		

