 

 
 
 
 
 



 


 
 


 






 

 

 



 
 



 

 
 



 




 

 


 



 

 

 





 


 











Original	Replacement	Original	Replacement
 Operate	 Power	 C/Eraser	 3D
 Open/Close	 Eject	 ShowView	 Format
 1	 1	 HDD	 Smart
 2	 2	 DVD	 Media
 3	 3	 Input	 AV
 4	 4	 Start Menu	 Menu
 5	 5	 DVD Menu/Original	 Shift + Menu
 6	 6	 Return	 Back
 7	 7	 Exit	 Exit
 8	 8	 DVD Title/Rec List	 D. Menu
 9	 9	 SET/Enter	 Ok
 0	 0	 Up	 Up
 -/--	 GUIDE	 Down	 Down
 Tv/DVD	 TV/R	 Right	 Right
 CH+	 Ch +	 Left	 Left
 CH-	 Ch -	 Dubbing	 List
 Direct	 Options	 P IN P	 Text





Original	Replacement	Original	Replacement
 Timer On/Off	 Shift + AV	 Replay	 Shift + Play
 Timeshift	 Shift + Guide	 Skip Search	 Shift + TV/R
 Blue/A-B	 Blue	 Zoom/Rec Mode	 Shift + Rec
 Red/B	 Red	 Function	 Shift + D. Menu
 Green/C	 Green	 Audio	 Dual
 Yellow/D	 Yellow	 Angle	 Shift + Red
 Play	 Play	 Subtitle	 Subt
 <</REV	 <<	 Direct Rec Tv	 Shift + Text
 >>/FWD	 >>	 Tamper Proof/On Screen	 Shift + Format
 Stop/Live	 Stop	 RGB Off/Chapter Mark	 Shift + Pre Ch
 Still/Pause	 Pause	 Operate Tv	 Shift + Power
 I>/Slow	 Sleep	 Back	 Info
 Rec	 Rec	 Vol+ Tv Control	 Vol +
 Stop Rec	 Shift + Stop	 Vol- Tv Control	 Vol -
 Pause Rec	 Shift + Pause	 CH+ Tv Control	 Shift + Ch +
 >>I/F.ADV Skip	 >>I	 CH- Tv Control	 Shift + Ch -
 I<</I F.ADV	 I<<	 Input Tv Control	 Pre Ch

