 



 

 





 



 





 

 

 

 

 

 

 

 

 

 
 




 

 

 

 

 

 
 
 





 







Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 Eject/Open/Close	 Eject / Surround	 Vol+ Tv	 Vol+
 Power Tv	 Shift + Power	 Title	 Sound / Title
 DVD	 Shift + 2	 0	 0
 VCR	 Shift + 4	 Mute Tv	 Mute / Dimmer
 AV	 AV / Input / RDS	 Vol- Tv	 Vol-
 AV Tv	 Shift + AV / Input / RDS	 O)/Audio	 Audio / Lang I/II
 1	 1	 [...] / Subtitle	 Subtitle / EQ
 2	 2	 Camera/Angle	 Info / Angle
 3	 3	 Rec	 Rec / Rec Mode
 PR+ Tv	 CH+ / Page+	 Rec Mode	 Shift + Rec / Rec Mode
 4	 4	 Timer Rec	 Sleep / Timer
 5	 5	 <<	 << / Tune-
 6	 6	 >>	 >> / Tune+
 PR- Tv	 CH- / Page-	 I<<	 I<< / Preset-
 7	 7	 >>I	 >>I / Preset+
 8	 8	 Pause/Step	 Pause / Step / Freeze



