

 





 

 

 

 

 

 













 





Original	Replacement
 Power	 Power
 SD Card	 Display / Media
 Input TV	 TV/Radio /
 Input AV	 AV / Input / RDS
 Menu	 Menu / Home
 [+]/Aspect	 Picture / Format
 N	 Sound / Title
 Direct Rec TV	 Shift + Rec / Rec Mode
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Viera Tools	 D.Menu / Top
 Viera Link	 Smart / List
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK	 OK
 Right	 Right

Original	Replacement
 Option	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 [=◆]/STTL	 Subtitle / EQ
 [=i]/Index	 Eject / Surround
 [=+]/Hold	 Shift + Stop /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original		Replacement		Original		Replacement	
	7		7		II>/Step		Pause / Step / Freeze
	8		8		Rec		Rec / Rec Mode
	9		9				
	Mute		Mute / Dimmer				
	0		0				
	Recall/Last View		Fav / Marker / PC				
	Vol+		Vol+				
	PR+		CH+ / Page+				
	Vol-		Vol-				
	PR-		CH- / Page-				
	Power Down		Shift + Power				
	PR- Down		Shift + CH- /				
	PR+ Down		Shift + CH+ /				
	<</I<<		<< / Tune-				
	Play		Play / Slow				
	>>/>>I		>> / Tune+				
	Stop		Stop / Hold				

