

 





 

 

 

 

 

 













 





Original	Replacement
 Power	 Power
 SD Card	 Display / Media
 Input TV	 TV/Radio /
 Input AV	 AV / Input / RDS
 Menu	 Menu / Home
 [+]/Aspect	 Picture / Format
 N	 Sound / Title
 Direct Rec TV	 Shift + Rec / Rec Mode
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Viera Tools	 D.Menu / Top
 Viera Link	 Smart / List
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK	 OK
 Right	 Right

Original	Replacement
 Option	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 [=◆]/STTL	 Subtitle / EQ
 [=i]/Index	 Eject / Surround
 [=+]/Hold	 Shift + Stop /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original	Replacement
7	7
8	8
9	9
Mute	Mute / Dimmer
0	0
Recall/Last View	Fav / Marker / PC
Vol+	Vol+
PR+	CH+ / Page+
Vol-	Vol-
PR-	CH- / Page-
Power Down	Shift + Power
PR- Down	Shift + CH- /
PR+ Down	Shift + CH+ /
<< / <<<	<< / Tune-
Play	Play / Slow
>> / >>>	>> / Tune+
Stop	Stop / Hold

Original	Replacement
>/Step	Pause / Step / Freeze
Rec	Rec / Rec Mode

