









 

 

 







 

 

 

 





 






 
 



 









 





 









Original	Replacement	Original	Replacement
	Power		Power
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Find		Shift + Red / Netflix / Search
	Home		Menu / Home
	Adjust		Smart / List
	Up		Up
	CH-/I<		CH- / Page-
	Left		Left
	OK		OK
	Right		Right
	CH+ />I		CH+ / Page+
	Down		Down
	Source		AV / Input / RDS
	Back		Back / Return
	Options		Setup / OPT /
	Vol-		Vol-
	Mute		Mute / Dimmer
	Vol+		Vol+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





	Original	Replacement		Original	Replacement
	8	8			
	9	9			
	Subtitle	Subtitle / EQ			
	Format	Picture / Format			
	0	0			
	Text	Text / Goto			
	Info	Info / Angle			

