 

 
 


 
 




 









 
 


 
 

 




 

 







	Original	Replacement		Original	Replacement
	Start/Stop	 Power		Play	 Play
	Photo	 Options		Pause	 Pause
	Display	 Info		Stop	 Stop
	Self Timer	 AV			
	Zero Memory	 Exit			
	Date/Time	 Sleep			
	W	 Ch +			
	T	 Ch -			
	Photo Search	 TV/R			
	A.DUB	 Subt			
	I>/Slow	 List			
	X2	 Dual			
	>>	 >>			
	<<	 <<			
	<  /-	 I<<			
	F.ADV	 Format			
	>/+	 >>I			

