 




 
 

 
 
 

 



 
 
 


 
 


 
 

 

 

 



 



 
 


 

 

 

 



 







 









Original	Replacement	Original	Replacement
Power	Power	6	6
Audio Monitor	Audio / Lang I/II	7	7
Wide	Picture / Format	8	8
Tv/Video	TV/Radio /	9	9
[=]	Text / Goto	-/--	Guide / EPG / -/--
Tv/Video	AV / Input / RDS	0	0
Vol+	Vol+	Red	Red / Netflix / Search
[]	Info / Angle	Green	Green / APP / Repeat
Prog+	CH+ / Page+	Yellow	Yellow / YouTube / Repeat
Vol-	Vol-	Blue	Blue / Prime Video / Random
Display	Display / Media		
Prog-	CH- / Page-		
1	1		
2	2		
3	3		
4	4		
5	5		





Original		Replacement		Original		Replacement	
	Eject		Eject / Surround		4		4
	Power		Power		5		5
	Audio Monitor		Audio / Lang /III		6		6
	Wide		Picture / Format		7		7
	Counter Remain		Yellow / YouTube / Repeat		8		8
	[]		Info / Angle		9		9
	I> Slow		Shift + Play /		-/--		Guide / EPG / -/--
	X2		Shift + >> /		0		0
	I<< Index Search		I<< / Preset-		Input Select		AV / Input / RDS
	Index Search >>I		>>I / Preset+		Vol+		Vol+
	Display		Display / Media		Prog+		CH+ / Page+
	SP/LP		Green / APP / Repeat		Vol-		Vol-
	Clear		Exit / Cancel / Clear		Prog-		CH- / Page-
	Tv/Video		TV/Radio /		Rec		Rec / Rec Mode
	1		1		Pause		Pause / Step / Freeze
	2		2		Up		Up
	3		3		Timer		Sleep / Timer



