
 











 


 
 
 


 




 


Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 */Favoritos	 Pre Ch
 abc/Borrar	 Options
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Prog+	 Ch +

Original	Replacement
 Prog-	 Ch -
 Guía	 Guide
 VOD/Videoclub	 Smart
 ver TV	 TV/R
 Menu	 Menu
 PVR	 Media
 Info	 Info
 Atrás	 Back
 Salir	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow





Original		Replacement		Original		Replacement	
	Blue		Blue				
	[X]/Zoom		Format				
	I<<		I<<				
	>>I		>>I				
	Rec		Rec				
	<<		<<				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	>>		>>				
	Power Tv	 + 	Shift + Power				

