



Original	Replacement	Original	Replacement
 Power	 Power	 8	 8
 Open / Close	 Eject	 9	 9
 TV / DTV	 TV/R	 +/-	 Shift + Guide
 Line	 AV	 0	 0
 DVD	 Media	 PRE	 Pre Ch
 TTX	 Text	 Vol +	 Vol +
 PIP ON / OFF	 Shift + Power	 Vol -	 Vol -
 PIP Swap	 Shift + Back	 Prog +	 Ch +
 PIP Source	 Shift + AV	 Prog -	 Ch -
 PIP Sound	 Shift + Dual	 M/S	 Subt
 1	 1	 Still	 Shift + Pause
 2	 2	 Sleep	 Sleep
 3	 3	 TV Menu	 Menu
 4	 4	 P.STD	 Format
 5	 5	 S.STD	 Shift + Subt
 6	 6	 P.Size	 Shift + Format
 7	 7	 Exit / Cancel	 Exit





Original	Replacement
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 Enter	 Ok
 Mute	 Mute
 Display	 Shift + Info
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 <<	 <<
 >>	 >>
 I<<	 I<<
 >>I	 >>I
 Red / Setup	 Red
 Green / Title	 Green
 Yellow / Menu	 Yellow

Original	Replacement
 Blue	 Blue
 Index Repeat	 Shift + Text
 MIX A-B	 Shift + TV/R
 L/F Audio	 Dual
 Size Subtitle	 3D
 Reveal Goto	 Back
 Hold / Program / Menu	 Shift + Menu
 Prepage / Angle / List	 List
 Next Page / Surround / Opt	 Options
 Subpage / Zoom / EPG	 Guide
 Store / Clear / i	 Shift + Exit
 Store / Clear / i	 Info

