





















Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		PR-		CH- / Page-
	Power		Power		1		1
	Tv/AV		AV / Input / RDS		2		2
	Multimedia		Display / Media		3		3
	I/II		Audio / Lang I/II		4		4
	List		Smart / List		5		5
	QView		D.Menu / Top		6		6
	Menu		Menu / Home		7		7
	Up		Up		8		8
	PR+		CH+ / Page+		9		9
	Left		Left		SSM		Sound / Title
	Vol-		Vol-		0		0
	OK		OK		PSM		Picture / Format
	Stop		Stop / Hold		Sleep		Sleep / Timer
	Right		Right		ARC		Info / Angle
	Vol+		Vol+		[≡]/Text		Text / Goto
	Down		Down		[≡x]/Update		<< / Tune-



