

 



 
 



 

 



 




 

 




 




 


 
 
 

 

 


 















Original	Replacement	Original	Replacement
 On/Standby	 Power	 Stop Tape	 Up
 Memory	 Smart	 Rec/Pause Tape	 Down
 Clear/Dimmer	 Exit	 Vol+	 Vol +
 CD	 Yellow	 Vol-	 Vol -
 Tuner/Band	 Green	 >>/>> Preset/Up	 Ch +
 Tape	 Blue	 <</ <<	 Ch -
 Video/AUX	 Red	 Equalizer Mode	 Dual
 Disc Select 1	 Sleep	 X-Bass	 Subt
 Disc Select 2	 TV/R	 Display	 Info
 Disc Select 3	 Format	 Clock/Timer	 AV
 Disc Select 4	 3D	 1	 1
 Disc Select 5	 D. Menu	 2	 2
 Random CD	 Media	 3	 3
 Pause CD	 Pause	 4	 4
 Stop CD	 Stop	 5	 5
 Play CD	 Play	 6	 6
 Play Tape	 Ok	 7	 7



