


 

 

 
 



 

 

 






 










 




 


Original	Replacement
 Power	 Power
 [=]	 REPEAT TEXT
 Sleep	 PROG SLEEP
 Color	 SETTINGS OPT
 [+]/◆	 DISPLAY INFO
 ?	 HOME SMART
 16:9/[+]	 PICTURE FORMAT
 I-II/[≡i]	 SOUND DUAL
 (<>)/X	 CLEAR EXIT
 P+▲	 ▲
 P+▲	 + CH
 P-▼	 - CH
 P-▼	 ▼
 V+▶	 ▶
 V+▶	 + VOL
 V-◀	 ◀
 V-◀	 - VOL

Original	Replacement
 MENU	 TOP MENU MENU
 MENU	 OK
 INST	 APP MEDIA
 []	 TIMER AV
 P<P	 FAV PRE-CH
 [Red]	 A
 [Picture]	 SHIFT + PICTURE FORMAT
 [Green]	 B
 [Sound]	 SHIFT + SOUND DUAL
 [Yellow]	 C
 [Timer]	 SHIFT + TIMER AV
 [Blue]	 D
 [Headphones]	 DISC NAV LIST
 1	 1
 2	 2
 3	 3
 4	 4





	Original	Replacement	Original	Replacement
	5			
	6			
	7			
	8			
	9			
	0			
	PP			Eject
	Mute			Mute

