



| Original | Replacement |
|--|---|
|  Power |  Power |
|  Source |  AV / Input / RDS |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Guide |  Guide / EPG / -/-- |
|  Return |  Back / Return |
|  Eco |  D.Menu / Top |
|  Menu |  Menu / Home |
|  Exit |  Exit / Cancel / Clear |

| Original | Replacement |
|---|--|
|  Option |  Setup / OPT / |
|  OK |  OK |
|  Up |  Up |
|  Down |  Down |
|  PR+ |  CH+ / Page+ |
|  Right/Zoom+ |  Right |
|  Left/Zoom- |  Left |
|  PR- |  CH- / Page- |
|  Info |  Info / Angle |
|  Mute |  Mute / Dimmer |
|  Vol+ |  Vol+ |
|  Vol- |  Vol- |
|  Text |  Text / Goto |
|  Subtitle |  Subtitle / EQ |
|  List |  Smart / List |
|  Red |  Red / Netflix / Search |
|  TV |  Display / Media |





| Original | Replacement |
|----------|-----------------------------|
| | Green / APP / Repeat |
| | Yellow / YouTube / Repeat |
| | O)Lang / Audio / Lang I/II |
| | Blue / Prime Video / Random |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

