












 

 

 




 

 


 



 



 


 
















 

 
 







 





Original	Replacement	Original	Replacement
	Power		Power
	Eject		Eject
	USB		Media
	Radio		TV/R
	Aux/Di/MP3 Link		AV
	HDMI		Pre Ch
	Disc		Menu
	Info		Info
	Back/Title		Back
	Options		Options
	Up		Up
	Down		Down
	Right/>>>		Right
	Left/;<<		Left
	OK		Ok
	I<		I<<
	Play		Play
	Pause		Pause
	>		>>
	Stop		Stop
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Treble		Ch +
	Bass		Ch -
	Ambisound		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Original	Replacement	Original	Replacement
 9	 9		
 0	 0		
 Subtitle	 Subt		
 Audio Sync	 Format		
 Zoom	 Shift + Eject		
 Angle	 Sleep		
 Repeat/Program	 Text		
 Sound	 Dual		

