 
 


 

 



 





Original	Replacement	Original	Replacement
	Power		Blue/[]
	Vol +		Info
	Vol -		Text
	Ch +		1
	Ch -		2
	Mute		3
	Menu		4
	Exit		5
	Back		6
	Ok		7
	Up		8
	Down		9
	Right		0
	Left		AV
	Red		Media
	Green		Play
	Yellow		>>




 
 


 
 

 

 

 

 



 
 


 
 
 




	Original	Replacement	Original	Replacement
	<<	 <<		
	Stop	 Stop		
	Pause	 Pause		
	Rec	 Rec		
	Mark	 3D		
	0000	 GUIDE		

 
 
 

 





Original	Replacement	Original	Replacement
 Power	 Power	 Blue/[]	 Blue
 Vol+	 Vol +	 Info	 Info
 Vol-	 Vol -	 Text	 Text
 Mute	 Mute	 Play	 Play
 PR+	 Ch +	 Stop	 Stop
 PR-	 Ch -	 Rec	 Rec
 Exit	 Exit	 Pause	 Pause
 Menu	 Menu	 >>	 >>
 Back	 Back	 <<	 <<
 Up	 Up	 1	 1
 Down	 Down	 2	 2
 Right/Zoom+	 Right	 3	 3
 Left/Zoom-	 Left	 4	 4
 OK	 Ok	 5	 5
 Red/[o]	 Red	 6	 6
 Green/Timer/List	 Green	 7	 7
 Yellow	 Yellow	 8	 8

 






 
 
 
 
 
 

 



 

 

 
 


 
 
 

 
 
 

 



 



 


 





 

 
 
 

 
 
 

 




Original	Replacement	Original	Replacement
 9	 9		
 AV	 AV		
 SP/LP	 Media		





Original	Replacement	Original	Replacement
 Power	 Power	 Blue/[]	 Blue
 Vol+	 Vol +	 Info	 Info
 Vol-	 Vol -	 Text	 Text
 Mute	 Mute	 1	 1
 PR+	 Ch +	 2	 2
 PR-	 Ch -	 3	 3
 Menu	 Menu	 4	 4
 Exit	 Exit	 5	 5
 Back	 Back	 6	 6
 Up	 Up	 7	 7
 Down	 Down	 8	 8
 Right/Zoom+	 Right	 9	 9
 Left/Zoom-	 Left	 0/-/--	 0
 OK	 Ok	 AV	 AV
 Red/[o]	 Red	 SP/LP	 Media
 Green/Timer/List	 Green	 Play	 Play
 Yellow	 Yellow	 Stop	 Stop





Original	Replacement	Original	Replacement
FWD	>>	>>	>>
REV	<<	<<	<<
REC	Rec	REC MODE	Rec
PAUSE	Pause		Pause
MARK	Mark	ECO 3D	3D
0000	0000	-/~/ GUIDE	Guide

