 



























 






 











 





 














 

 
 


Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV/CL	 AV / Input / RDS
 Zoom	 Zoom / Size
 [...] / Subtitle	 Subtitle / EQ
 Audio / Language	 Audio / Lang I / II
 ◀ / Camera	 Shift + Info / Angle
 ?	 Setup / OPT /

Original	Replacement
 ECO	 Display / Media
 CEC	 Smart / List
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z / Back	 Back / Return
 PR+	 CH+ / Page+
 Up	 Up
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 PR-	 CH- / Page-
 TVG / Top Menu	 Guide / EPG / -/--
 TVG / Top Menu	 D.Menu / Top
 TXT / Menu	 Text / Goto

 

















 























 





Original	Replacement	Original	Replacement
	TXT/Menu		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Shift + Zoom /
	Rec/ >		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<		<< / Preset-
	>		>>  / Preset+
	<<		<< / Tune-
	>>		>> / Tune+





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV/CL	 AV / Input / RDS
 Zoom	 Zoom / Size
 [...] / Subtitle	 Subtitle / EQ
 Audio / Language	 Audio / Lang I / II
 ◀ / Camera	 +  Shift + Info / Angle
 ?	 Setup / OPT /

Original	Replacement
 ECO	 Display / Media
 CEC	 Smart / List
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z / Back	 Back / Return
 PR+	 CH+ / Page+
 Up	 Up
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 PR-	 CH- / Page-
 TVG / Top Menu	 Guide / EPG / -/--
 TVG / Top Menu	 D.Menu / Top
 TXT / Menu	 Menu / Home

 

























 















 
 


 
 




 

 
 

 
 













Original	Replacement	Original	Replacement
	TXT/Menu		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Shift + Zoom /
	Rec/l>		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/CL		AV / Input / RDS
	Zoom		Zoom / Size
	[...]/Subtitle		Subtitle / EQ
	Audio/Language		Audio / Lang I/II
	◀/Camera		Shift + Info / Angle
	?		Setup / OPT /
	ECO		Display / Media
	CEC		Smart / List
	Mute		Mute / Dimmer
	i		Info / Angle
	Z/Back		Back / Return
	PR+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	PR-		CH- / Page-
	TVG/Top Menu		Guide / EPG / -/-
	TVG/Top Menu		D.Menu / Top
	TXT/Menu		Text / Goto





Original	Replacement	Original	Replacement
	TXT/Menu		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Shift + Zoom /
	Rec/l>		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+





Original	Replacement	Original	Replacement
	Power		ECO
	1		Display / Media
	2		Smart / List
	3		Mute / Dimmer
	4		Info / Angle
	5		Back / Return
	6		Z/Back
	7		CH+ / Page+
	8		Up
	9		Vol-
	0		Left
	AV/CL		OK
	Zoom		Right
	[...]/Subtitle		Vol+
	Audio/Language		Down
	</Camera		CH- / Page-
	?		TVG/Top Menu
			TVG/Top Menu
			TXT/Menu
			D.Menu / Top
			Text / Goto
			Text / Goto





Original		Replacement		Original		Replacement	
	TXT/Menu		Menu / Home				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	[<>]		Shift + Zoom /				
	Rec/I>		Rec / Rec Mode				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	I<		I<< / Preset-				
	>I		>>I / Preset+				
	<<		<< / Tune-				
	>>		>> / Tune+				

