

 





 

 
 

 
 
 

 


 



 
 

 

 


 

 





Original	Replacement	Original	Replacement
	Power		Power
	Coax		Smart
	OPT		Options
	Audio In		Dual
	Bluetooth		Up
	USB		Down
	AUX		Media
	Play		Play
	Pause		Pause
	Play/Pause		Ok
	>		>>
	>		Right
	I<		I<<
	I<		Left
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
			Audio Sync+
			Audio Sync-
			Bass+
			Bass-
			Surr
			Night
			Treble+
			Treble-
			Ch +
			Ch -
			1
			4
			2
			5
			3
			6

