 
 
 
 
 
 
 
 

 
 

 








 


 


 

 
 
 
 

 

 
 

 



 



 

 



 
 
 

 
 







 
 




Original	Replacement	Original	Replacement
 Power	 Power	 I<<	 I<<
 Eco	 3D	 Play	 Play
 Quick Select 1	 1	 Pause	 Pause
 Quick Select 2	 2	 >>I	 >>I
 Quick Select 3	 3	 Mute	 Mute
 Quick Select 4	 4	 CH+	 Ch +
 Up	 Up	 CH-	 Ch -
 Enter	 Ok	 Search	 TV/R
 Down	 Down	 Restorer	 Exit
 Right	 Right	 CH Level	 Media
 Left	 Left	 Mode	 Subt
 Vol+	 Vol +	 Tv Audio	 Dual
 Vol-	 Vol -	 Bluetooth	 Smart
 Back	 Back	 Memory	 AV
 Setup	 Menu	 CBL/Sat	 5
 Info	 Info	 DVD/Bluray	 6
 Option	 Options	 FM	 7





	Original	Replacement	Original	Replacement
	Blu-ray	 8		
	Game	 9		
	AM	 Guide		
	Media Player	 0		
	USB	 Pre Ch		
	Sound Mode >	 Green		
	< Sound Mode	 Red		
	Audio Delay+	 Blue		
	Audio Delay-	 Yellow		
	Tune+	 >>		
	Tune-	 <<		
	Sleep	 Sleep		

