

 
 


 

 
 

 

 



 
 
 

 

 






 


 







 



 



 



 





 










Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	DTV		Smart
	Radio		TV/R
	USB		Options
	DVD		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv Guide		Guide
	Recall		Back
	Vol +		Vol +
	Vol -		Vol -
	P.Mode		Format
	S.Mode		Shift + Dual
	FAV		Pre Ch
	CH +		Ch +
	CH -		Ch -
	Menu		Menu
	Exit		Exit
	Info		Info
	Source		AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok





Original	Replacement	Original	Replacement
Sleep	Sleep	Red / Goto	Red
Aspect	3D	Green / A-B	Green
Subtitle	Subt	Yellow / Angle	Yellow
Text	Text	Blue / Repeat	Blue
Audio	Dual		
Text Hold	Shift + Text		
Zoom / Text	Eject		
Power / Display	Shift + Power		
Rec / DVD Menu	Rec		
I<<	I<<		
>>I	>>I		
Stop / Eject	Stop		
<<	<<		
>>	>>		
Play	Play		
Pause	Pause		
Rec List / DVD Setup	List		

Original	Replacement
Red / Goto	Red
Green / A-B	Green
Yellow / Angle	Yellow
Blue / Repeat	Blue

