





 
 



 
 

 


 
 
 
 

 

 

 

 

 
 
 

 
 
 

 
 
 

 
 

 


 
 


 



 
 


 

 
 


 
 




Original		Replacement		Original		Replacement	
	Power		Power		Vol -		Vol -
	Power Tv		Shift + Power		Display		Info
	Input Tv		AV		Yellow		Yellow
	Open / Close		Eject		Blue		Blue
	1		1		Red		Red
	2		2		Green		Green
	3		3		Top Menu		Shift + Menu
	4		4		Pop Up Menu		Menu
	5		5		Return		Back
	6		6		Options		Options
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	Audio		Dual		OK		Ok
	Subtitle		Subt		Home		Smart
	Vol +		Vol +		I<<		I<<



