
 


 


 
 


 



 





 
 
 

 







 


 

 

 



 
 


 

 

 

 

 

 


 


 

 



 
 
 

 

 


 


Original	Replacement
 Power	 Power
 Input 1	 Shift + 1
 Input 2	 Shift + 2
 Input 3	 Shift + 3
 Input 4	 Shift + 4
 Input 5	 Shift + 5
 PC	 Smart
 HMG	 Media
 [i+]/Timer/Info	 Info
 [-]	 3D
 [↔]	 Format
 [←]	 Pre Ch
 CTRL HDMI	 AV
 1	 1
 2	 2
 3	 3
 4	 4

Original	Replacement
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 EPG/DVD Top Menu/Guide	 Guide
 TV/DTV/SAT	 TV/R
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





 

 

 

 

 
 
 
 

 





 




Original	Replacement	Original	Replacement
	Exit		Exit
	Tools		Options
	Home		Menu
	Return		Back
	Mute		Mute
	CH Return		D. Menu
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Rec		Rec
	Pause		Pause
	Stop		Stop
	Play		Play
	I<<<		I<<<
	[...]		Subt
	>>>I		>>>I
	[≡?]		Eject
	<<<		<<<
	>>>		>>>
	[≡i]		List
	[≡]		Text
	[-]DVD/[+]		Shift + Options
	[<>]/HDD		Shift + Format
	I-II		Dual










 

 

 

 

 

 

 




 


 












 

 



Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 EPG/DVD Top Menu/Guide	 Guide
 Menu/Home	 Menu
 Return	 Back
 Enter	 Ok
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Left	 Left
 Pause	 Pause
 Stop	 Stop
 Play	 Play
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 >>	 >>
 Vol+ Tv	 Vol +
 Vol- Tv	 Vol -
 Mute Tv	 Mute





Original		Replacement	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P+		Ch +
	P-		Ch -
	Rec		Rec
	Pause		Pause
	Stop		Stop
	Play		Play

Original		Replacement	
	I<<		I<<
	>>I		>>I
	Vol+ Tv		Vol +
	Vol- Tv		Vol -
	Mute Tv		Mute

