



 

 








 

 
 
 


 

 

 

 








 

 


 









Original	Replacement	Original	Replacement
	Power		Green / APP / Repeat
	Stop		Yellow / YouTube / Repeat
	Pause		Blue / Prime Video / Random
	Rec		Info / Angle
	<<		Setup / OPT /
	Play		Up
	>>		Left
	Zoom / Size		OK
	D.Menu / Top		Right
	Picture / Format		Back / Return
	Guide / EPG / -/--		Down
	Shift + Red / Netflix /		Display / Media
	AV / Input / RDS		Vol+
	Smart / List		Shift + Smart / List
	Menu / Home		CH+ / Page+
	Exit / Cancel / Clear		Vol-
	Red / Netflix / Search		Mute / Dimmer





Original	Replacement	Original	Replacement
 CH-	 CH- / Page-		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 Subtitle	 Subtitle / EQ		
 0	 0		
 Text	 Text / Goto		

Original	Replacement

