












 


 



 








| Original  | Replacement   |
|---|---|
|  Open/Close      |  Eject / Surround        |
|  Power           |  Power                   |
|  VCR             |  Shift + 4               |
|  DVD             |  Shift + 2               |
|  TV / VCR        |  TV/Radio /              |
|  TV / View       |  Smart / List            |
|  2               |  2                       |
|  4               |  4                       |
|  1 / Tracking -  |  1                       |
|  5               |  5                       |
|  3 / Tracking + |  3                      |
|  6             |  6                     |
|  7             |  7                     |
|  8             |  8                     |
|  9             |  9                     |
|  Clear         |  Exit / Cancel / Clear |
|  0             |  0                     |

| Original  | Replacement   |
|---|---|
|  P.SCAN    |  Blue / Prime Video / Random |
|  Menu      |  Menu / Home                 |
|  Setup     |  Setup / OPT /               |
|  Up        |  Up                          |
|  PR+       |  CH+ / Page+                 |
|  PR-       |  CH- / Page-                 |
|  Down      |  Down                        |
|  Left      |  Left                        |
|  Right     |  Right                       |
|  Enter     |  OK                          |
|  Edit     |  Fav / Marker / PC          |
|  Display |  Display / Media           |
|  I<<     |  I<< / Preset-             |
|  >>I     |  >>I / Preset+             |
|  Pause   |  Pause / Step / Freeze     |
|  Play    |  Play / Slow               |
|  <<      |  << / Tune-                |










 





| Original  |             | Replacement   |                           |
|---|-------------|---|---------------------------|
|    | >>          |    | >> / Tune+                |
|    | Stop        |    | Stop / Hold               |
|    | Rec         |    | Rec / Rec Mode            |
|    | Input       |    | AV / Input / RDS          |
|    | Subtitle    |    | Subtitle / EQ             |
|    | <  / Slow - |    | Vol-                      |
|    | Slow + /  > |    | Vol+                      |
|    | Copy        |    | Guide / EPG / -/-         |
|    | Angle       |    | Info / Angle              |
|    | Rec Speed   |    | Shift + Rec / Rec Mode    |
|    | Zoom        |    | Zoom / Size               |
|   | Repeat      |   | Green / APP / Repeat      |
|  | A-B         |  | Yellow / YouTube / Repeat |
|  | Search      |  | Red / Netflix / Search    |
|  | Audio       |  | Audio / Lang I/II         |
|  | Title       |  | Sound / Title             |
|  | Timer       |  | Sleep / Timer             |

| Original |  | Replacement |  |
|----------|--|-------------|--|
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |
|          |  |             |  |





| Original  | Replacement   |
|---|---|
|  Open/Close      |  Eject / Surround        |
|  Power           |  Power                   |
|  VCR             |  Shift + 4               |
|  DVD             |  Shift + 2               |
|  TV / VCR        |  TV/Radio /              |
|  TV / View       |  Smart / List            |
|  2               |  2                       |
|  4               |  4                       |
|  1 / Tracking -  |  1                       |
|  5               |  5                       |
|  3 / Tracking + |  3                      |
|  6             |  6                     |
|  7             |  7                     |
|  8             |  8                     |
|  9             |  9                     |
|  Clear         |  Exit / Cancel / Clear |
|  0             |  0                     |

| Original  | Replacement   |
|---|---|
|  P.Scan    |  Blue / Prime Video / Random |
|  Menu      |  Menu / Home                 |
|  Setup     |  Setup / OPT /               |
|  Up        |  Up                          |
|  PR+       |  CH+ / Page+                 |
|  PR-       |  CH- / Page-                 |
|  Down      |  Down                        |
|  Left      |  Left                        |
|  Right     |  Right                       |
|  Enter     |  OK                          |
|  Edit     |  Fav / Marker / PC          |
|  Display |  Display / Media           |
|  I<<     |  I<< / Preset-             |
|  I>>     |  I>> / Preset+             |
|  Pause   |  Pause / Step / Freeze     |
|  Play    |  Play / Slow               |
|  <<      |  << / Tune-                |





| Original  |             | Replacement   |                           | Original |  | Replacement |  |
|---|-------------|---|---------------------------|----------|--|-------------|--|
|    | >>          |    | >> / Tune+                |          |  |             |  |
|    | Stop        |    | Stop / Hold               |          |  |             |  |
|    | Rec         |    | Rec / Rec Mode            |          |  |             |  |
|    | Input       |    | AV / Input / RDS          |          |  |             |  |
|    | Subtitle    |    | Subtitle / EQ             |          |  |             |  |
|    | <I / Slow - |    | Vol-                      |          |  |             |  |
|    | Slow + / I> |    | Vol+                      |          |  |             |  |
|    | Copy        |    | Guide / EPG / -/--        |          |  |             |  |
|    | Angle       |    | Info / Angle              |          |  |             |  |
|    | Rec Speed   |    | Shift + Rec / Rec Mode    |          |  |             |  |
|   | Zoom        |   | Zoom / Size               |          |  |             |  |
|  | Repeat      |  | Green / APP / Repeat      |          |  |             |  |
|  | A-B         |  | Yellow / YouTube / Repeat |          |  |             |  |
|  | Search      |  | Red / Netflix / Search    |          |  |             |  |
|  | Audio       |  | Audio / Lang I/II         |          |  |             |  |
|  | Title       |  | Sound / Title             |          |  |             |  |
|  | Timer       |  | Sleep / Timer             |          |  |             |  |

